

FITTING INSTRUCTIONS


VD31020XXXSP

SHORT SHAFT GUARD FITMENT

WARNING


- ◆ This product must be installed exactly as per these instructions using only the hardware supplied.
- ◆ In the event of damage to any suspension component, contact your nearest authorised ARB stockist. Repairs or modifications to the suspension system components must not be attempted.
- ◆ Do not use this product for any vehicle make or model, other than those specified by ARB.
- ◆ Do not remove labels from suspension components.
- ◆ This product or its fixing must not be modified in any way.
- ◆ The installation of this product may require the use of specialized tools and/or techniques
- ◆ It is recommended that this product is only installed by trained personnel
- ◆ These instructions are correct as at the publication date. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ◆ Work safely at all times

Note: These fitting instructions should be read in conjunction with the vehicle workshop manual.

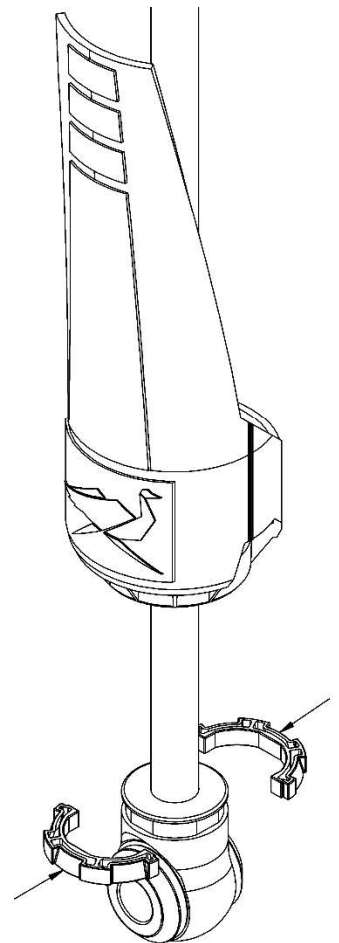


KIT CONTENTS

Shaft Guard Retainer (x2)

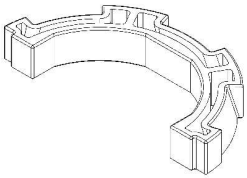

VD31000003

Shaft Guard (x1)

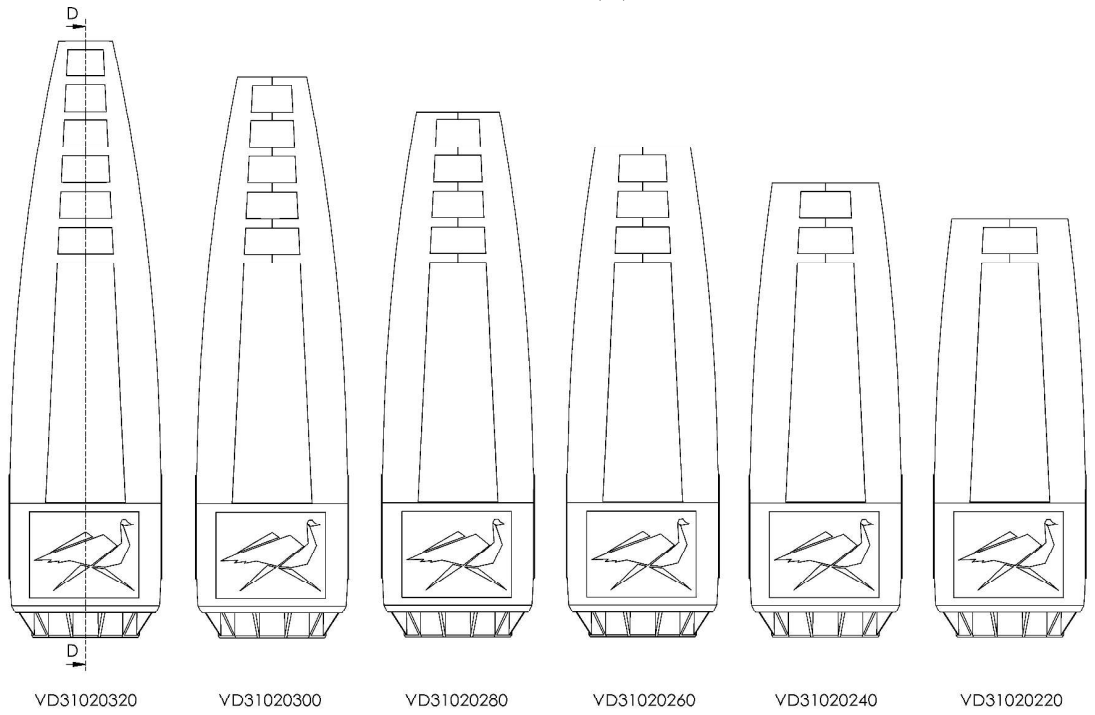

NEW GUARD FITMENT

MOUNTED REAR OF THE AXLE WITH BOLT FROM THE REAR

Note orientation of eyelet relative to retainers and guard.


Models:

- Landcruiser 76/78/79
- Patrol
- Hilux 2015 ON

1. Fit new shaft guard as shown and described below.

- Fit shaft guard over eyelet.
- Fit retainers to eyelet.
- There are features on the shaft guard that locate in the gap between the two retainers. Align the guard with these gaps and firmly pull down over the retainers to secure in place.
- Check retainers are completely secured by guard. Use a flat blade screwdriver to poke retainer under tab on guard if required.

2. Fit damper to vehicle. (Refer to damper fitting instructions for fitment of damper to vehicle.)

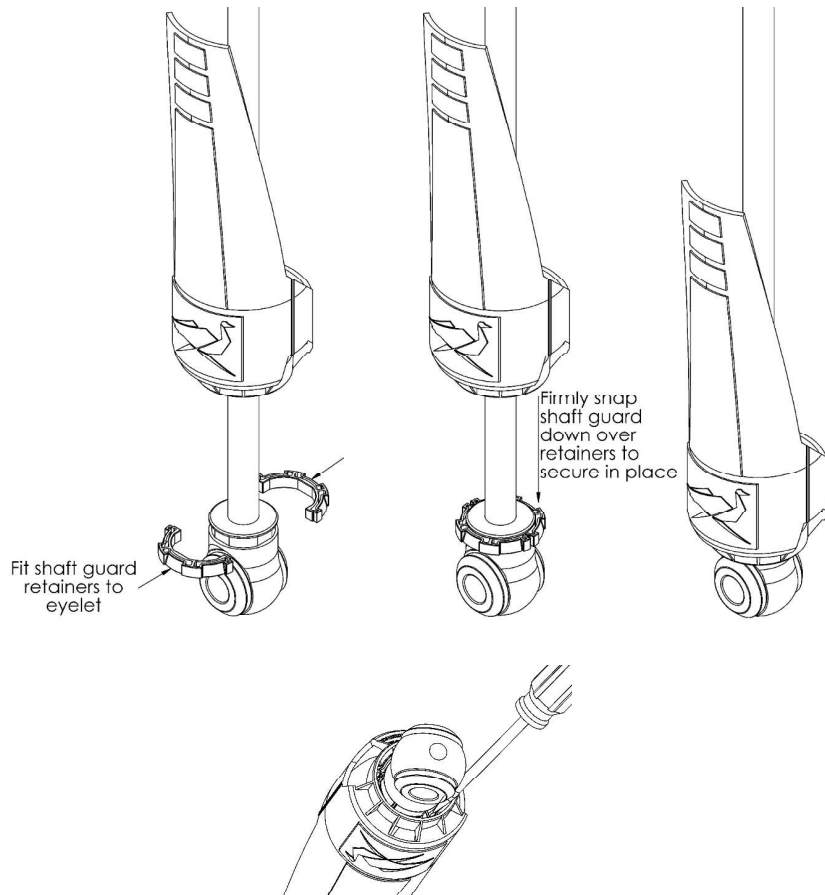

NEW GUARD FITMENT

MOUNTED REAR OF THE AXLE WITH BOLT FROM THE SIDE

Note orientation of eyelet relative to retainers and guard.

Models:

- Hilux 2005-15
- Ranger/BT50
- Tacoma

1. Fit new shaft guard as shown and described below.

- Fit shaft guard over eyelet.
- Fit retainers to eyelet.
- There are features on the shaft guard that locate in the gap between the two retainers. Align the guard with these gaps and firmly pull down over the retainers to secure in place.
- Check retainers are completely secured by guard. Use a flat blade screwdriver to poke retainer under tab on guard if required.

2. Fit damper to vehicle. (Refer to damper fitting instructions for fitment of damper to vehicle.)

